

Installation manual of AKIT18

1. Open the box, find the main control box with the QR code, scan the QR code and download the APP.
2. Using a 12V power supply, switch on the product power supply, test all light sources to ensure normal light, (note: product power supply current cannot exceed 5A)

3. QR code

APP + button

Input voltage: 5V-18V
Output voltage: 5V




Scan the code to download
[applicable to Apple/Android]

Specification

Car interior whole set ambient lights

Acrylic 18LEDS Flow RGB color

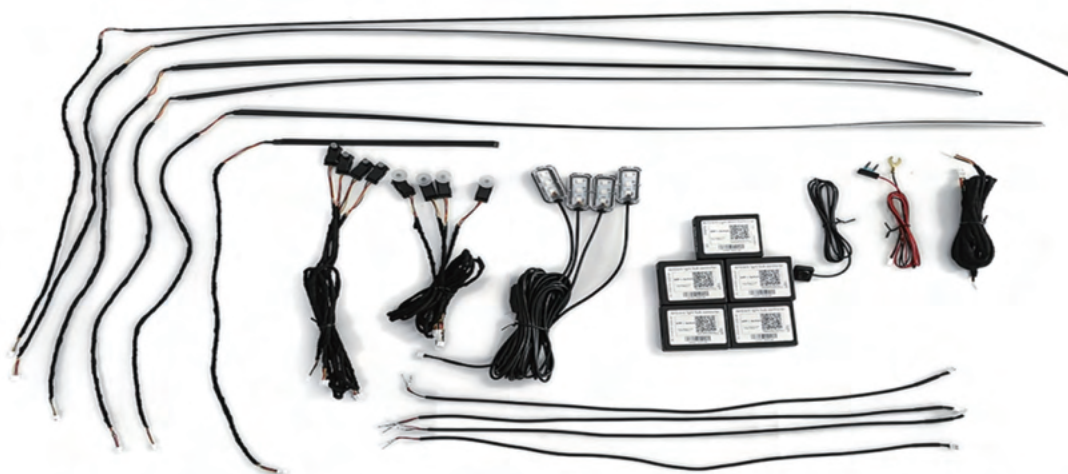

Console Acrylic strip	90CM @1pc, 20CM @1pc	Main controller @1pc	Sub-controller @4pcs
Door Acrylic strip	75CM @4pcs	Main switch controller	@1pc
Foot well led	@4pcs	Sub controller power cable	@4pcs
Door handle LED	@4pcs	Main controller power cable	@1pc
Pocket cover LED	@4pcs	1-2way splitter	@1pc

Footwell lamp*4pcs



Installation position:

Take off the double-side tape and stick it on the back, tear off the backing tape and choose a suitable position to stick it under the seat, press it tightly, and fix the wire harness with a cable tie.

Storage lamp*4pcs



Installation position:

Drill a hole of about 4.5mm in the storage compartment, remove the light guide column and insert it from the outside, and fix the lamp head with hot melt glue.

Handle light*4pcs



Installation position:

Drill a hole of about 2mm at the door handle, tear off the back glue of the handle light and stick it on the light, insert it from the inside to the outside, press hard to make the double-side tape stick to the door panel.