

Chevy/GMC 2500 3500

Installation Instructions



Tech Support: (847) 327-0073 ext. 3

Kit Contents:

- (2) Hitch Bar™ Lights (Left & Right)
- (1) 25' 2-Output Power Harness

Step-1 HITCH BAR™ INSTALL

- Install the Hitch Bars into the end of

Hitch (FIG A), the single bolt hole will be immediately available (FIG B), remove bolt from 2500 3500 truck, Rotate bars into place and reinstall stock bolt.



STEP 2 – HARNESS INSTALLATION

STARTING AT THE PASSENGER REAR CORNER LAY OUT YOUR HARNESS SO THAT THE LONG SIDE (A) OF THE HARNESS IS FACING THE LEFT SIDE

ROUTE THE (A) SIDE OF THE HARNESS OVER THE TRAILER HITCH TO THE LEFT HITCH BAR

ROUTE THE (B) SIDE OF THE HARNESS TO THE RIGHT SIDE HITCH BAR


SECURE BY INSERTING AND TWISTING THE IP68 WATERPROOF CONNECTORS TO EACH HITCH BAR

ROUTE THE (C) SIDE OF HARNESS ALONG PASSENGER SIDE FRAME RAIL TO POWER SOURCE OR SWITCH

GO BACK THRU YOUR WIRING AND SECURE WIRES AS NEEDED. ENSURE HARNESS DOES NOT CONTACT ANY MOVING OR HOT PARTS OF THE TRUCK

HOOK UP YOUR POWER SUPPLY TO THE END OF (C)

ADJUST HITCH BARS AS NEEDED TO OPTIMAL COVERAGE

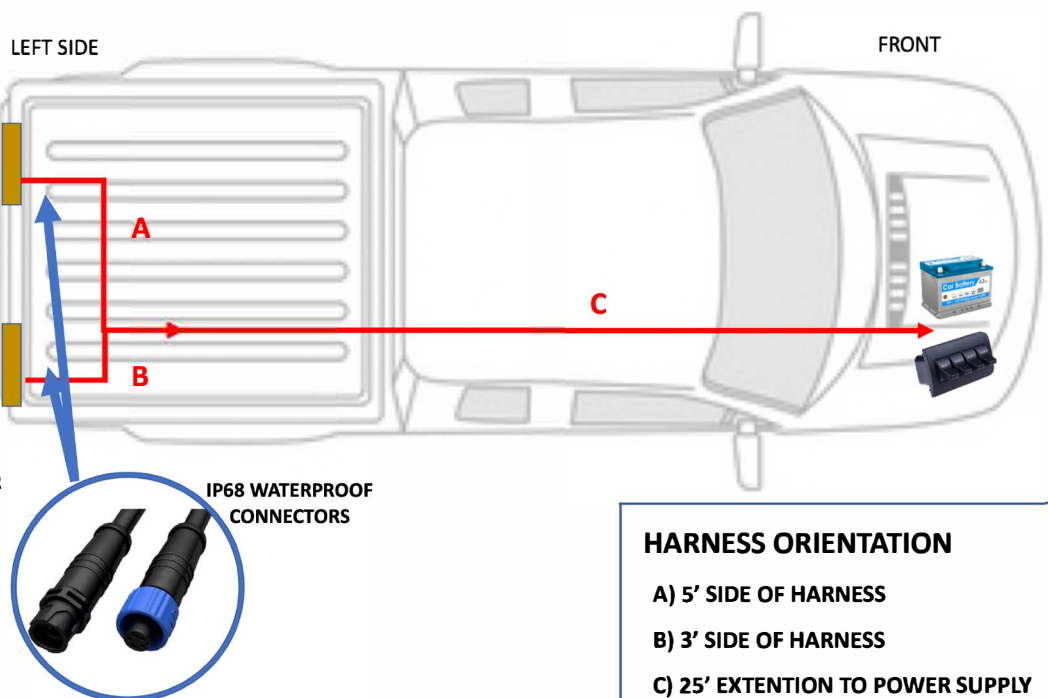

HARNESS ORIENTATION

- A) 5' SIDE OF HARNESS
- B) 3' SIDE OF HARNESS
- C) 25' EXTENTION TO POWER SUPPLY